




AHC-80 Quick Install Guide

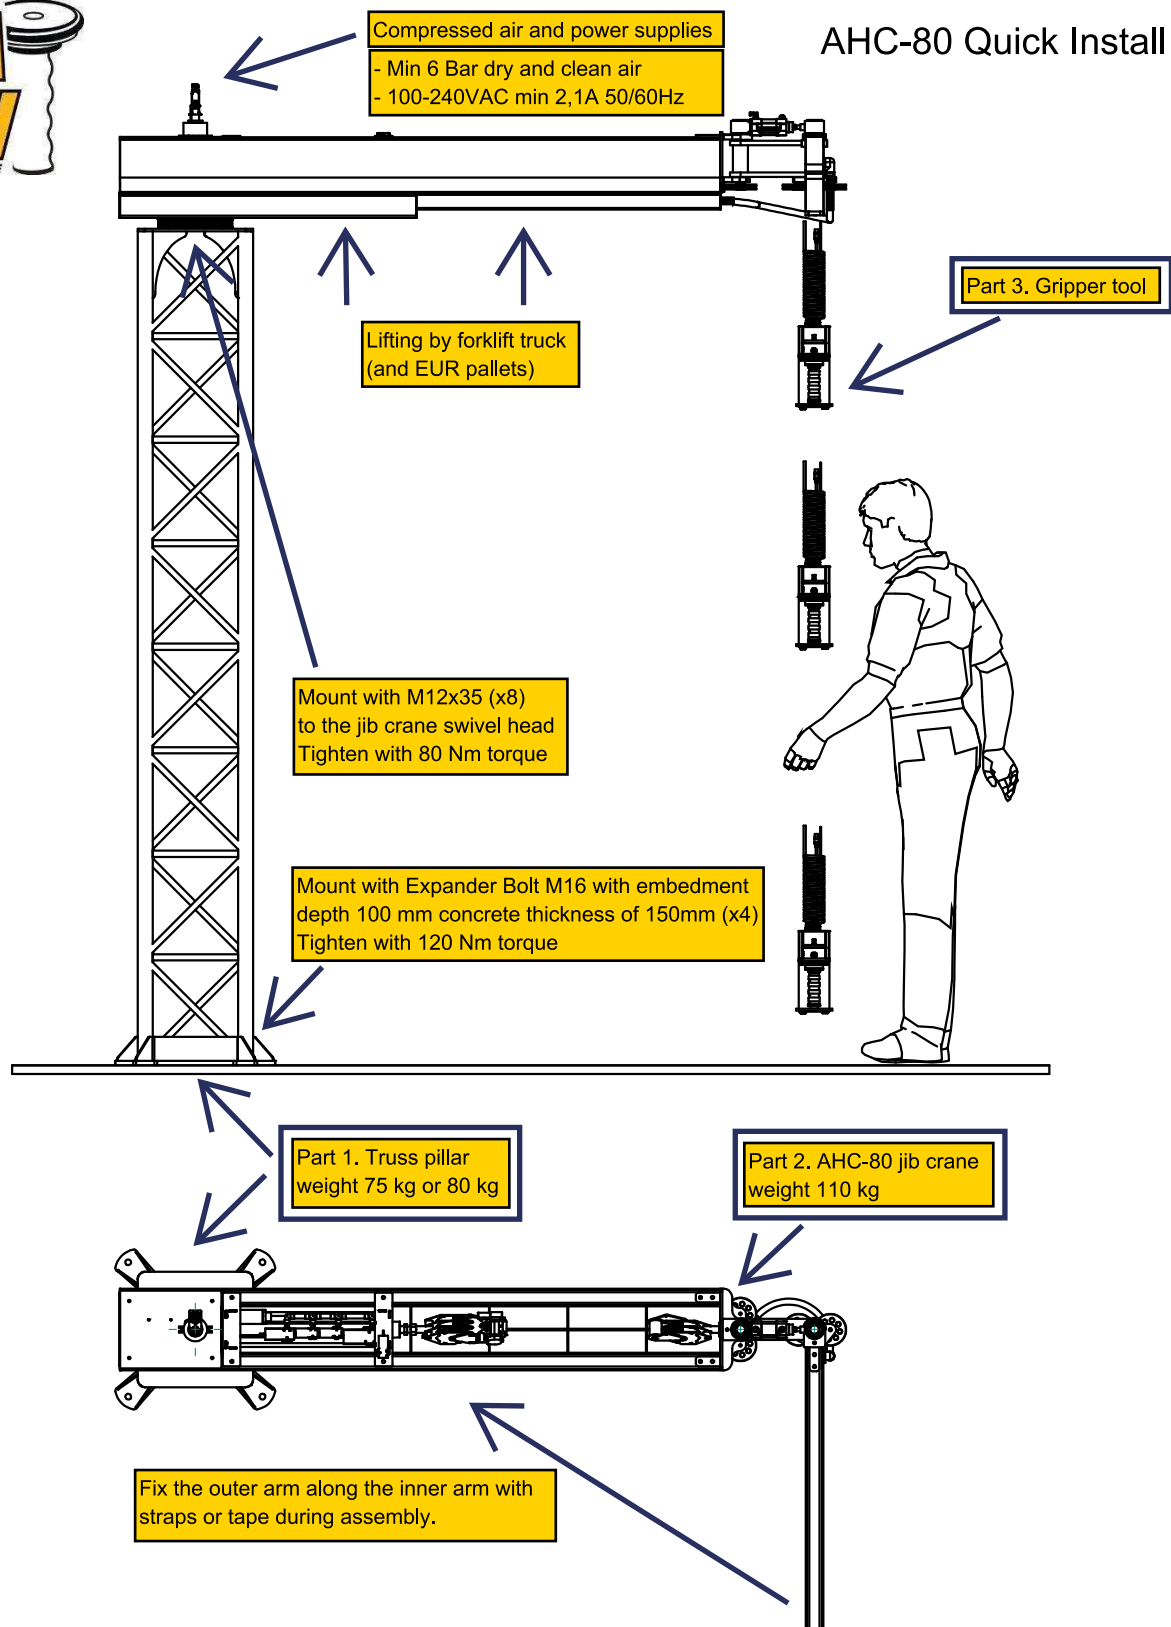

- Installation**
- Check the location to achieve maximum reach and function.
 - Place the truss pillar on a flat surface.
 - Mark and drill into the concrete for the M16 expansion bolts.
 - Fasten the pillar, tighten with 120Nm torque.
 - Place the folded jib crane on a forklift (possibly with one or more pallets)
 - Raise the the jib crane to the top of the truss pillar.
 - Mount it with 8 M12x35 bolts to the crane swivel head. Tighten with 80 Nm torque.
 - Check that the crane is free to rotate 360 degrees.
 - If the crane needs to be adjusted. Do it on the floor with shimming washers.
 - Attach the gripper in the lifting wire and connect the air hoses and signal cable.
 - Connect the power supply and compressed air.
 - Set the control system parameters correct for the current gripper and use.